

Task 4

Read the statements.

- 1 Masaru Ibuka has not always been a successful inventor.
- 2 Creativity is a function of humans, not of computers.
- 3 High technology equipment has certain limits.

Now read the text "Human Touch" again and decide which of the statements contains the main idea.

Task 5

Can you make a sentence which contains the main idea of each paragraph?

Paragraph I _____

Paragraph II _____

Clearing it up

-I want to go to South Padre Island next summer, How can I get there?

-Follow these instructions:

- Tune up** your car,
- check** all the tires,
- fill up** the tank at the gas station,
- drive** on highway 54 to Matamoros,
- cross** the border to Brownsville, Texas,
- turn** right for the beach and finally,
- smile**, you are already in South Padre Island.


LOOK!

IMPERATIVE



- Tune up
 - Check
 - Fill
 - Drive
 - Cross
 - Turn
 - Smile
- Instructions / Advice**

Look at these pictures.

(Don't smoke)

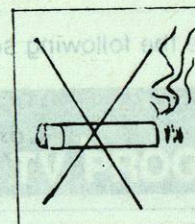


(Go to the left)

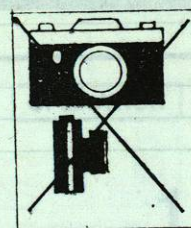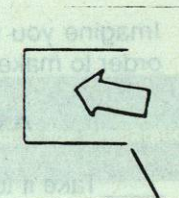

(Do not use cameras)

(Drive slowly)

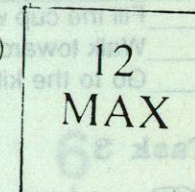

Look!

IMPERATIVE

- ! Don't smoke = negative
- ! Go to the left = positive
- ! Do not use cameras = negative
- ! Drive slowly = positive

Instructions / advice

Task 1

Match the pictures with the instructions/advice

()

()

()

- 1 Salute the flag at school.
- 2 Sing the National Anthem.
- 3 Do not sleep in class.
- 4 Sit down correctly.
- 5 Run in the "Prepa Marathon."
- 6 Don't speak Spanish in class.

Task 2

Imagine you have a robot at home to serve you. Write the following set of instructions in the correct order to make him bring you a cup of water:

A cup of water

- Take it to the command center. _____
- Choose a plastic cup. _____
- Fill the cup with water. _____
- Walk toward the water bottle. _____
- Go to the kitchen. _____

Correct order

- 1 _____
- 2 _____
- 3 _____
- 4 _____
- 5 _____

Task 3

In the following 5 pages, there is a series of instructions. Copy them in this space:

Recording TV programs

Turn on the TV and select the channel for the recorder.

Playback

Watching TV programs

Press POWER on the TV

Speaker system

Receiving broadcasts

Watching TV Programs


OPERATIONS

RECORDING TV PROGRAMS

Before operating, complete the preparations on pages 15 to 22.

OPERATION

Numbers in the illustration show the sequence of operation

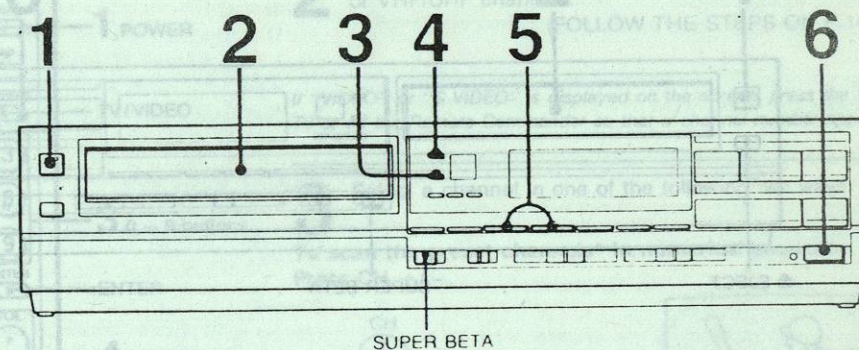

SUPER BETA

Preparation

- Turn on the TV and select the channel for the recorder.
- Check the SUPER BETA is set to ON.
- Make sure that nothing is connected to the LINE IN VIDEO and AUDIO jacks at the rear.

- 1 Press POWER. The power indicator will light up.
- 2 Insert a cassette
- 3 Select the recording tape speed, **II** or **III**, with REC MODE. The length of recording time differs for each mode. Refer to the chart on page 6.
- 4 Press TV/VTR so that the VTR indicator appears.
- 5 Select the channel to be recorded with CHANNEL +/-.
- 6 Press RECORD. The RECORD indicator will light and recording will begin.

To stop recording, press **■** STOP.

When the tape reaches its end, it will be rewound to the beginning.

To eject the cassette, press **▲** EJECT.

To turn off the power, press POWER.

To stop the tape momentarily during recording Press **||** PAUSE. The indicator above the button lights. The TV program can still be seen on the TV, but the picture will not be recorded. To resume recording, press **||** PAUSE again. To protect the video heads and the tape, the pause mode will be automatically released after about 8 minutes and recording will stop.

Note

The power can be automatically turned on by inserting a cassette without pressing POWER.

Task 2

Imagine you have a robot at home to serve you. Write the following set of instructions in the correct order to make him bring you a cup of water.

PLAYBACK

OPERATION Numbers in the illustration show the sequence of operation

Preparation

- Turn on the TV and select the channel for the recorder.
- Set the SUPER BETA switch as follows:
ON: for a tape recorded with this switch ON.
OFF: for a tape recorded with this switch OFF or a tape recorded with another VCR which is not equipped with SuperBeta system.

- 1 Press POWER. The power indicator will light up.
- 2 Insert a cassette
- 3 Press ► PLAY.

During playback, the recorded speed mode is automatically selected and the selected speed indicator appears in the window.

To stop playing, press ■ STOP.
(Or press ▲ EJECT to take the cassette out.)

To rewind the tape, press ◀◀ REW.

To advance the tape rapidly, press ▶▶ FF.

When playing back a cassette with its safety tab removed, simply insert the cassette without pressing POWER. The power will be automatically turned on and playback will begin.


PICTURE ADJUSTMENTS

COLOR selector
Normally set to 1. For more color intensity, set to 2 or 3.


SHARPNESS control
Normally set to the center detent position. Slide it toward SHARP for a sharp picture, or toward SOFT for a soft picture.

TRACKING control
If streaks or snow appear during playback of a tape recorded on another recorder, adjust it for the best possible picture. Return to the center detent position after playing back that particular tape.

Watching TV Programs

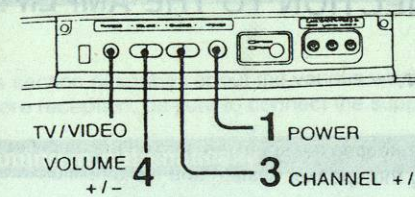

1 Press POWER on the TV or the Remote Commander to turn the TV on.

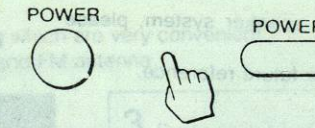


2 Turn the cable mode on or off, depending on if you want to watch cable or VHF/UHF channels.
(FOLLOW THE STEPS ON P. 14)

If "VIDEO" or "S VIDEO" is displayed on the screen, press the TV/VIDEO button on the TV or on the Remote Commander so that a channel number appears.


3 Select a channel in one of the following two ways:

To scan the preset channels* in numerical sequence
Press CH +/-.


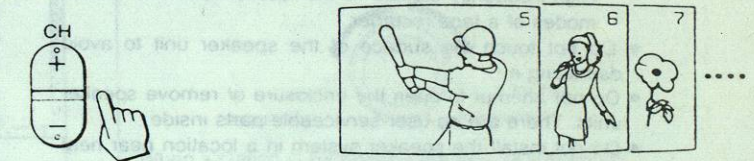


* For more on presetting channels, see pp. 15 - 18.

To select a channel directly
Press the channel number button(s) and then ENTER.
For example, to select channel 10, press 1, 0 and ENTER.

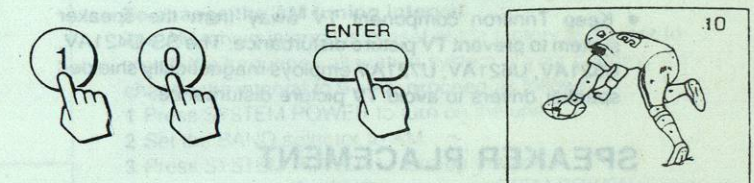


4 Press VOL +/- to adjust the volume.

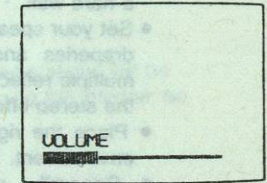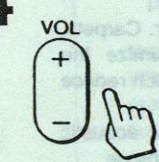

The display will disappear automatically after 3 seconds.

To turn off the TV
Press POWER on the TV or the Remote Commander again.

To reduce the volume To increase the volume

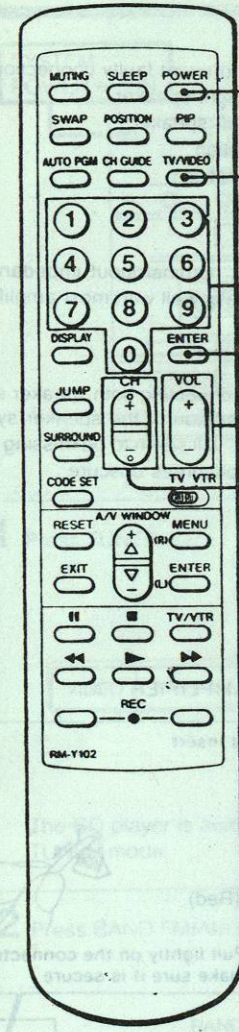

RM-Y102

SPEAKER SYSTEM

SS-U421AV, SS-U521AV, SS-U621AV, SS-U721AV

OPERATING INSTRUCTIONS

Before installing or operating the speaker system, please read this manual thoroughly. This manual should be retained for future reference.

PRECAUTIONS

- Lower the volume each time you turn your amplifier on or off to avoid sound "bursts".
- Turn off your amplifier when connecting or disconnecting equipment.
- Never use this speaker system for P.A. (public address), because excessive power input might damage the speaker units.
- Avoid supplying the following signals for a long period of time.
 - Continuous sine wave power of more than 5 watts
 - FM interstation noise
 - Severe hum noise
 - High-frequency signals in the fast-forward and rewind modes of a tape recorder
- Do not touch the surface of the speaker unit to avoid damaging it.
- Do not attempt to open the enclosure or remove speaker units. There are no user-serviceable parts inside.
- Do not install the speaker system in a location near heat sources such as radiators or air ducts, or in a place subject to moisture, direct sunlight or excessive dust.
- To maintain the new condition of your speaker system, periodically wipe the cabinet with a soft cloth. Do not use any type of scouring powder, abrasive pad or solvent.
- Do not place recorded tapes on or near the speaker since the strong magnetic field of the speakers may affect the recorded material.
- Keep Trinitron component TV away from the speaker system to prevent TV picture disturbance. The SS-U421AV, U521AV, U621AV, U721AV employs magnetically shielded speaker drivers to avoid TV picture disturbance.

SPEAKER PLACEMENT

- Here are a few suggestions on basic speaker placement.
- Place each speaker with its back 3-5 cm (1 1/4"-2") from a hard wall.
 - Set your speaker system up on a hard, flat floor. Carpets, draperies and upholstered furniture will minimize the multiple reflections of high-frequency sound which reduce the stereo effect.
 - Place the right and left speakers in a similar acoustic environment. This will provide a natural stereo image.
 - Generally we recommend that the speaker/listener relationship be an equilateral triangle. If the speaker separation is too wide, face the speakers a little towards each other.
 - Place the speakers no higher than your ears when you are seated, if the speakers are to be positioned above the floor.

CONNECTION TO THE AMPLIFIER

CAUTION

Before connecting the speakers, turn off the amplifier to avoid damaging the speaker system and the amplifier.

Speaker cord coding

Remember the coding, and prevent faulty connections.
 R outputs on amp: for right speaker
 L outputs on amp: for left speaker
 Red cord: for ⊕ connection
 Black cord: for ⊖ connection



Speaker impedance

This speaker system has a nominal input impedance of 8 ohms, and will perform equally well with most amplifiers.

Phasing

Correct ⊕ ⊖ polarity when connecting both speaker systems insures proper in-phase operation. If the speaker system is out-of-phase, the bass tones will seem to be missing and the position of the instruments becomes obscure.


CONNECTION TO THE AMPLIFIER

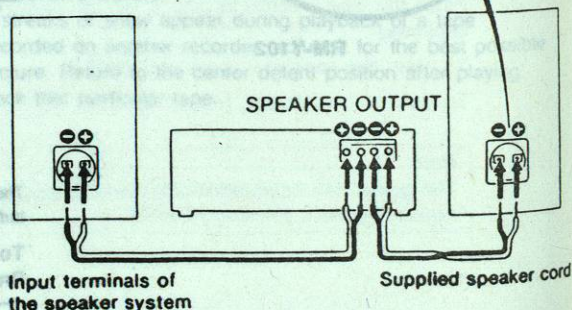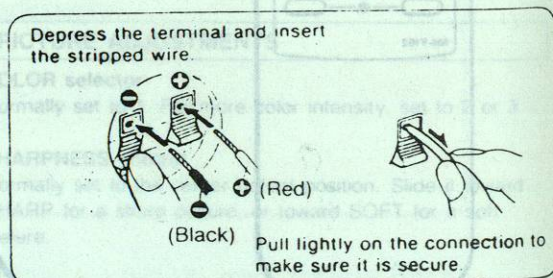


Receiving Broadcasts

This section describes about the various ways of tuning which are very convenient. Before reception, be sure to connect the supplied AM and FM antenna.

Tuning in Automatically

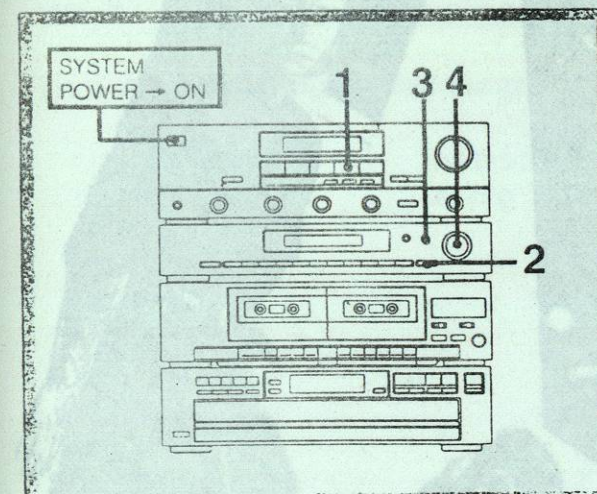


1 Press TUNER.

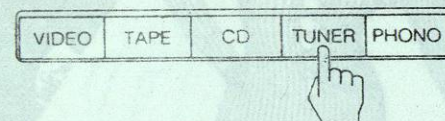


The CD player is automatically turned off in the TUNER mode.


2 Press BAND FM/AM to select FM or AM.

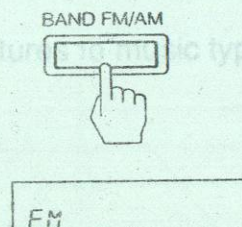

3 Press AUTO TUNING to set to the AUTO TUNING mode

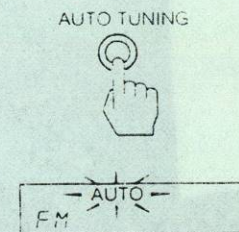

4 Select the station

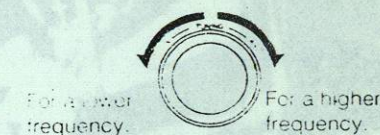

When a station is received automatic tuning stops.

Indicators in the display window

- "TUNED" appears when a stations tuned in
- "STEREO" appears when an FM stereo program of sufficient signal strength is received

To change the AM tuning interval

- The AM tuning interval is preset at the factory to 10 kHz to match the frequency allocation system of your country. To change the interval to 9 kHz, proceed as follows.
- 1 Press SYSTEM POWER to turn on the unit.
 - 2 Set the BAND selector to AM.
 - 3 Press SYSTEM POWER to turn off the unit.
 - 4 While pressing TUNING +/-, press SYSTEM POWER again to turn on the unit. To reset the interval to 10 kHz, follow the same procedure

Note

When the interval is changed, all stored stations will be erased from the memory. After changing the interval, be sure to store the stations again.

Task 4

Now, write a set of instructions on how to use a videogame:

OPERATING INSTRUCTIONS

Before installing or operating the speaker system, read this manual thoroughly. This manual should be retained for a long period of time.

PRECAUTIONS

- Lower the volume level to a safe level before turning the system on.
- Turn off your amplifier or receiver when you are not using the speaker system.
- Never use the speaker system for P.A. (public address) because excessive power may damage the speaker units.
- Avoid supplying the following items to a long period of time:

- High frequency signals in the radio and television modes of a TV set.
- High frequency signals in the radio and television modes of a TV set.




- Do not touch the speaker unit to avoid damaging it.
- Do not attempt to clean the enclosure or remove speaker units.
- Do not place the speaker system in a position where it is exposed to direct sunlight or excessive heat.

- To maintain the best sound quality, check the speaker system periodically.
- Do not place the speaker system in a position where it is exposed to direct sunlight or excessive heat.

- Keep the speaker system clean.
- Do not place the speaker system in a position where it is exposed to direct sunlight or excessive heat.

SPEAKER PLACEMENT

- Place the speaker system in a position where it is exposed to direct sunlight or excessive heat.
- Set your speaker system up on a hard, flat floor. Carpet, drapes and upholstered furniture will absorb the sound and reduce the speaker's effectiveness.
- Place the right and left speakers in an equilateral triangle environment. This will create a natural sound environment.
- Generally we recommend that the speaker relationship be an equilateral triangle.
- If the speaker separation is too wide, face the speakers a little towards each other.
- Place the speakers no higher than your ears when you are seated. If the speakers are to be positioned above the floor.

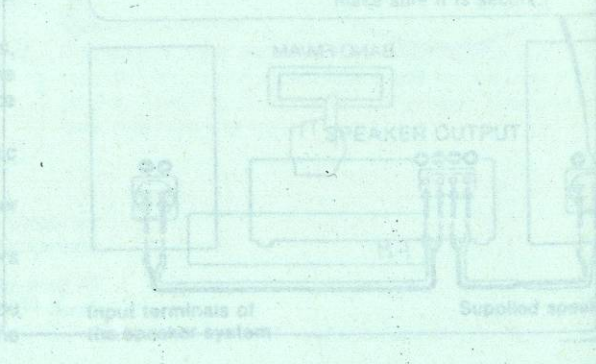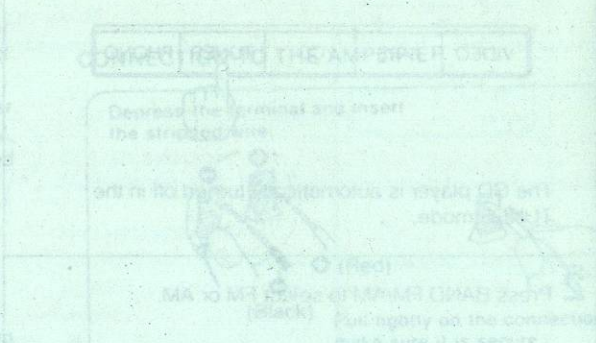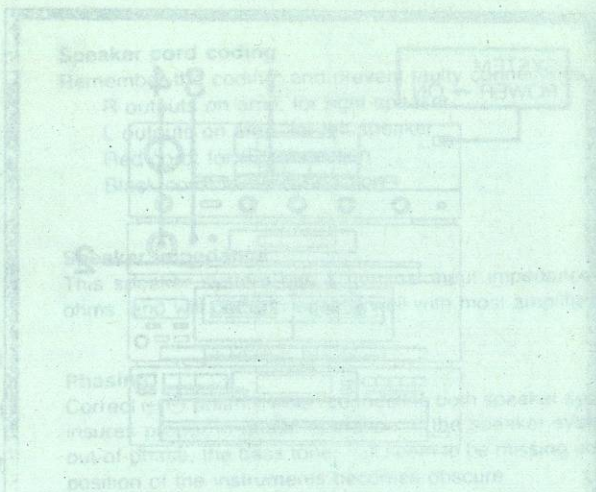

Words at work

LIKES AND DISLIKES

Task 1

What are your favorite kinds of music?



Match pictures to music types.

- Pop
- Classical
- Ballads
- Blues
- Opera
- Rock
- New Wave
- Heavy Metal
- Jazz
- Folk
- Country